



Installation Instruction

Carbon fiber engine and manifold cover



Audi RS3 8V.2 & 8Y / TTRS 8S

2.5 TFSI

PART NUMBER: MK-120




Description

This instruction shows how to replace the OE engine and manifold cover with do88 performance Carbon fiber covers.

At this type of installation we always recommend that you have basic mechanical experience and knowledge about safety during work on vehicles.

Parts List

- 1pc do88 Carbon fiber engine cover
- 1pc do88 Carbon fiber intake manifold cover

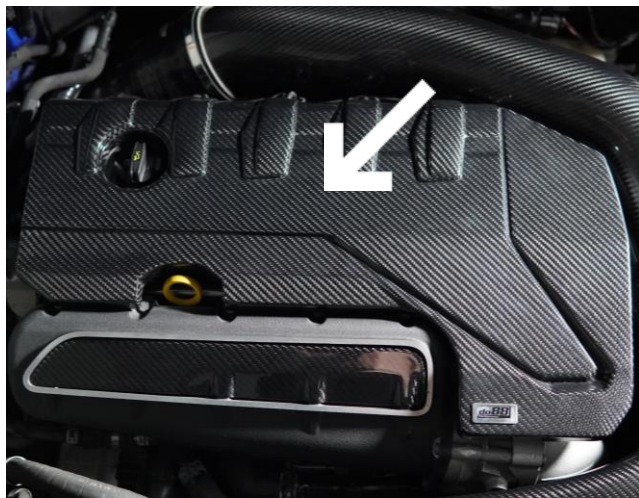


Step 1

To install the large engine cover, pull the OE engine cover upwards so it comes loose from the rubber bushings it sits in. Then just install the do88 carbon fiber engine cover in the same rubber grommets.



Step 2

The OE intake manifold cover sits in the manifold by double sided tape. To remove it, carefully pry between the cover and the intake manifold, starting in the upper right corner seen from front of vehicle. Preferably with a pry tool that won't make scratches on the intake manifold.

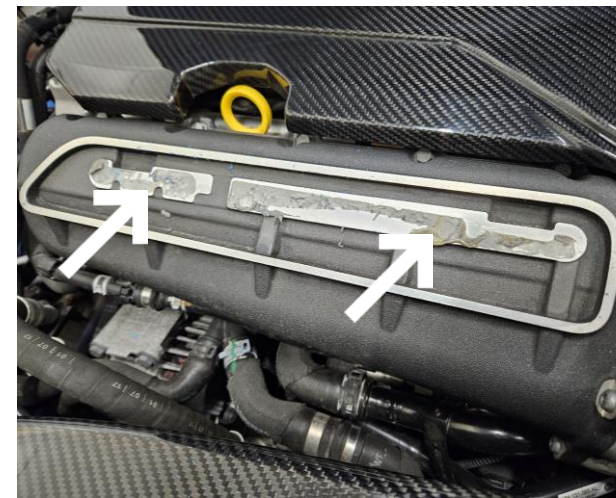

Step 3

Using a gasket scraper or similar tool, remove the rest of the double sided tape that was left from the OE cover just removed.



Step 4

When the mounting surface looks like this, clean it with some alcohol based cleaner.



Step 5

Remove the plastic liner from the double sided tape (red on picture) from the do88 carbon fiber intake manifold cover.



Step 6

Carefully center the do88 carbon fiber intake manifold before letting the double sided tape get grip. When centered well, firmly push it down to the intake manifold and hold pressure over the double sided tape sections for a while to make it fully bond.



Thank you for purchasing another do88 product.

Please check our website frequently for new product releases.
If you have any questions or concerns about this product please do not
hesitate to contact us: do88performance.com/contact